



**EDH1600 INSTALLER PARTS LIST**

MNSTAR PATENTED TECHNOLOGY

**Recommended Application: Battery Under the Hood - Trunk mounted serial control.**

| PART #  | DESCRIPTION   | NOTES  |
|---------|---|--|
| EDH1600 | Installer Harness - Trunk mounted serial control with Strobe Cables | Wire Harness for a trunk mounted serial control with 2 strobe cables to front corners. |

**Recommended Installer Kit: Provides Clean Professional Installation with a little room for future growth.**

|         |   |   |
|---------|---|---|
| EDH1600 | Installer Harness - Trunk mounted serial control with Strobe Cables | Wire Harness for a trunk mounted serial control with 2 strobe cables to front corners.  |
| PS-G6-A | Protector Distribution Center                                       | Under the hood fuse panel with mounting plate, six maxi fuses, fuse cover, two 40 amp ignition relays, connectors, heat shrink, master switch and 4ga. cable to connect to battery. |
| PD-B12  | Protector Distribution Center 12C                                   | Utilize for BATTERY HOT power distribution for radio tray components.   |
| PD-B12  | Protector Distribution Center 12C                                   | Utilize for IGNITION power distribution for radio tray components.  |

**Power Source - Designed for use at the Battery.**

|         |                               |   |
|---------|-------------------------------|---|
| PS-A4-A | Protector Distribution Center | Under the hood fuse panel with four maxi fuses, connectors, heat shrink, master switch and 4ga. cable to connect to battery.  |
| PS-G6-A | Protector Distribution Center | Under the hood fuse panel with mounting plate, six maxi fuses, fuse cover, two 40 amp ignition relays, connectors, heat shrink, master switch and 4ga. cable to connect to battery. |
| PS-G6-B | Protector Distribution Center | Under the hood fuse panel with mounting plate, six maxi fuses, fuse cover, two 40 amp ignition relays, connectors and heat shrink.  |
| PF-CT   | Protector Battery Feed Cable  | A 98" battery cable extension - 4 ga. power and ground from driver-side battery to the passenger-side of engine compartment.  |

**Power Distribution - Designed for use in the console, passenger compartment, or trunk.**

|        |   |  |
|--------|---|--|
| PD-B6  | Protector Distribution Center 6C        | Covered Fuse Panel, 100 Amp Power and Ground Studs, Screw Terminal Connections, six ATO Fused Outputs, & Metalized Label |
| PD-B12 | Protector Distribution Center 12C       | Covered Fuse Panel, 100 Amp Power and Ground Studs, Screw Terminal Connections, 12 ATO Fused Outputs & Metalized Label   |
| PR-C8  | Protector Distribution Center 8 Output  | 8 Fused Circuits, 2 -20 Amp Relays, Power & Ground Studs, Terminal Strip   |
| PR-D14 | Protector Distribution Center 14 Output | 14 Fused Outputs, 4 - 30 Amp Relays, Power & Ground Studs  |
| PR-E15 | Protector Distribution Center 15 Output | 15 Fused Outputs, 4- 40 Amp Relays, Power & Ground Studs, Terminal Strip   |

**Master Switch Options - Upgrades and Options For Main Power Disconnect and Service Cut-Offs.**

|          |  |  |
|----------|--|--|
| 10-1528  | Master Switch Cable 6ga. W/Fuse & Switch | Master switch with main fuse and a 16" 6ga. battery feed cable.        |
| 00-1447  | Master Switch (High Temp)                | Manual master switch for high temperature environments.                |
| 10-1421  | Master Relay 200 Amp                     | 200 amp solenoid or relay to switch emergency system power on and off. |
| 10-1529  | 6Ga. Master Switch Cable                 | 16" 6ga. battery feed cable to connect master switch or master relay.  |
| X85-0047 | 40 Amp Relay                             | 40 amp relay to switch on ignition power or other accessories.         |
| 00-1055  | 40 Amp Relay Connector Kit               | Relay Connector and terminals for a 40 amp bracketed relay.            |

**Siren Speaker Options**

|         |                       |  |
|---------|-----------------------|--|
| 00-1375 | Siren Speaker 2 Cable | Cable for Second Grill Speaker with speaker connector kit 00-1279. |
|---------|-----------------------|--|

**Console Options**

|         |                          |  |
|---------|--------------------------|--|
| DR29    | Diode Adapter 6amp       | The DR29 Diode Adapter will allow two separate switch inputs to operate one output or light. Rated for 6 amps.   |
| DR33    | Programmable Delay Timer | Dual timers built into one. One timer with two 25 amp circuits with 2-4 hour timed disconnect for MDT, radio, laptop, etc. and one timer with a 5 amp circuit with 8-10 hour timed disconnect for portable radio, flashlight, etc. |
| 00-1138 | Console Power Port       | Two panel mount power outlets to mount on console for radar, inverter etc.   |
| 00-1169 | Heavy Duty Foot Switch   | Momentary foot switch mounted under carpet for gun locks, push to talk, or hands free horn ring.   |
| 00-1207 | Console Fuse Assembly    | Dual inline fuse assembly to expand one circuit into two fused circuits.   |

**Gunlock Options**

|         |                         |  |
|---------|-------------------------|--|
| 00-1376 | Gunlock Harness         | Cable for gun lock with lock connector kit 00-1282.  |
| 00-1282 | Accessory Connector Kit | Kit containing connector & terminals for gunlock, dome lt, dash lt, deck lt, etc.                                  |
| 00-1378 | Rear Gunlock Harness    | Harness to add gunlock, timer & release button to rear of vehicle or trunk with connector kit 00-1282 for gunlock. |

**Rear Options**

|          |                                 |  |
|----------|---------------------------------|--|
| X85-0047 | 40 Amp Relay                    | 40 amp relay to switch on ignition power or other accessories.             |
| 00-1055  | 40 Amp Relay Connector Kit      | Relay Connector and terminals for a 40 amp bracketed relay.                |
| 00-1605  | Trunk Lid Warning Light Harness | Harness to attach warning lights on underside of trunk lid. No connectors. |

**Technicians Installation and Service Kit**

|         |                       |  |
|---------|-----------------------|--|
| 00-1545 | Protector Service Kit | Kit containing all connectors, terminals and removal tools for Installer series harnesses. Individual components may be refilled in bulk and labeled for quick re-order. Components and Connectors are chosen to ensure the highest quality of Installation. |
|---------|-----------------------|--|