



EDH1900 & EDH1910 INSTALLER PARTS LIST

MNSTAR PATENTED TECHNOLOGY

Recommended Application: Battery Under Hood - Console Switchbox and Siren or Trunk Serial Control.

PART #	DESCRIPTION	NOTES
EDH1900	Installer Harness - Console Switching or Trunk Serial Control with Strobe Cables	Wire Harness for a Switchbox and Siren mounted in the center console OR a Trunk mounted serial control system with 2 strobe cables to front corners.
EDH1910	Installer Harness - Console Switching or Trunk Serial Control	Wire Harness for a Switchbox and Siren mounted in the center console OR a Trunk mounted serial control system.

Recommended Installer Kit: Provides Clean Professional Installation with a little room for future growth.

EDH1900	Installer Harness - Console Switching or Trunk Serial Control with Strobe Cables	Wire Harness for a Switchbox and Siren mounted in the center console OR a Trunk mounted serial control system with 2 strobe cables to front corners.
PS-G6-A	Protector Distribution Center	Under the hood fuse panel with mounting plate, six maxi fuses, fuse cover, two 40 amp ignition relays, connectors, heat shrink, master switch and 4ga. cable to connect to battery.
PD-B12	Protector Distribution Center 12C	Utilize for BATTERY HOT power distribution for radio tray components.
PD-B12	Protector Distribution Center 12C	Utilize for IGNITION power distribution for radio tray components.

Power Source - Designed for use at the Battery.

PS-A4-A	Protector Distribution Center	Under the hood fuse panel with four maxi fuses, connectors, heat shrink, master switch and 4ga. cable to connect to battery.
PS-G6-A	Protector Distribution Center	Under the hood fuse panel with mounting plate, six maxi fuses, fuse cover, two 40 amp ignition relays, connectors, heat shrink, master switch and 4ga. cable to connect to battery.
PS-G6-B	Protector Distribution Center	Under the hood fuse panel with mounting plate, six maxi fuses, fuse cover, two 40 amp ignition relays, connectors and heat shrink.
PF-CT	Protector Battery Feed Cable	A 98" battery cable extension - 4 ga. power and ground from driver-side battery to the passenger-side of engine compartment.

Power Distribution - Designed for use in the console, passenger compartment, or trunk.

PD-B6	Protector Distribution Center 6C	Covered Fuse Panel, 100 Amp Power and Ground Studs, Screw Terminal Connections, six ATO Fused Outputs, & Metalized Label
PD-B12	Protector Distribution Center 12C	Covered Fuse Panel, 100 Amp Power and Ground Studs, Screw Terminal Connections, 12 ATO Fused Outputs & Metalized Label
PR-C8	Protector Distribution Center 8 Output	8 Fused Circuits, 2 -20 Amp Relays, Power & Ground Studs, Terminal Strip
PR-D14	Protector Distribution Center 14 Output	14 Fused Outputs, 4 - 30 Amp Relays, Power & Ground Studs
PR-E15	Protector Distribution Center 15 Output	15 Fused Outputs, 4- 40 Amp Relays, Power & Ground Studs, Terminal Strip

Master Switch Options - Upgrades and Options For Main Power Disconnect and Service Cut-Offs.

10-1528	Master Switch Cable 6ga. W/Fuse & Switch	Master switch with main fuse and a 16" 6ga. battery feed cable.
00-1447	Master Switch (High Temp)	Manual master switch for high temperature environments.
10-1421	Master Relay 200 Amp	200 amp solenoid or relay to switch emergency system power on and off.
10-1529	6Ga. Master Switch Cable	16" 6ga. battery feed cable to connect master switch or master relay.
X85-0047	40 Amp Relay	40 amp relay to switch on ignition power or other accessories.
00-1055	40 Amp Relay Connector Kit	Relay Connector and terminals for a 40 amp bracketed relay.

Siren Speaker Options

00-1375	Siren Speaker 2 Cable	Cable for Second Grill Speaker with speaker connector kit 00-1279.
---------	-----------------------	--

Console Options

DR29	Diode Adapter 6amp	The DR29 Diode Adapter will allow two separate switch inputs to operate one output or light. Rated for 6 amps.
DR33	Programmable Delay Timer	Dual timers built into one. One timer with two 25 amp circuits with 2-4 hour timed disconnect for MDT, radio, laptop, etc. and one timer with a 5 amp circuit with 8-10 hour timed disconnect for portable radio, flashlight, etc.
00-1138	Console Power Port	Two panel mount power outlets to mount on console for radar, inverter etc.
00-1169	Heavy Duty Foot Switch	Momentary foot switch mounted under carpet for gun locks, push to talk, or hands free horn ring.
00-1207	Console Fuse Assembly	Dual inline fuse assembly to expand one circuit into two fused circuits.

Gunlock Options

00-1376	Gunlock Harness	Cable for gun lock with lock connector kit 00-1282.
00-1282	Accessory Connector Kit	Kit containing connector & terminals for gunlock, dome lt, dash lt, deck lt, etc.
00-1378	Rear Gunlock Harness	Harness to add gunlock, timer & release button to rear of vehicle or trunk with connector kit 00-1282 for gunlock.

Rear Options

X85-0047	40 Amp Relay	40 amp relay to switch on ignition power or other accessories.
00-1055	40 Amp Relay Connector Kit	Relay Connector and terminals for a 40 amp bracketed relay.
00-1605	Trunk Lid Warning Light Harness	Harness to attach warning lights on underside of trunk lid. No connectors.

Technicians Installation and Service Kit

00-1545	Protector Service Kit	Kit containing all connectors, terminals and removal tools for Installer series harnesses. Individual components may be refilled in bulk and labeled for quick re-order. Components and Connectors are chosen to ensure the highest quality of Installation.
---------	-----------------------	--